

JUMBO Nail



***Clean air,
high performance***

***Extraction of
dust and solvent
vapours in nail
studios***

ULT AG

Am Göpelteich 1, OT Kittlitz
D-02708 Löbau / Germany
Phone: +49 (0) 35 85/41 28-0
Fax: +49 (0) 35 85/41 28-11

E-Mail: ult@ult.de
Internet: www.ult.de




Depending on what techniques are applied, considerable quantities of fine filing dust, coarser milling dust particles and acrylic solvent vapours are produced at the workplaces of nail designers. Such substances have negative effects on the health of both the customer and the designer. Irritations of the eyes, the mucous membranes and of the respiratory tracts are the results. An acrid smell and swirling dust adversely affect the convenient atmosphere in the studio.

Statutory regulations for keeping clean the air at workplaces prescribe that such substances must be removed.

The JUMBO Nail specifically designed for the requirements in nail studios extracts the harmful substances directly from their sources. This can be done by easy-to-adjust extraction arms to be equipped with various collecting elements or from below by installing the unit to the working table. A maintenance-free, powerful but, nevertheless, extremely low-noise turbine sucks the polluted air through a two-stage filtering system. The first stage withholds fine and finest dust particles, while the second one is an odour filter containing 6 kg of highly effective charcoal produced for medical purposes to adsorb vapours and odours. What comes out is filtered, highly clean and odourless air. The JUMBO Nail is of modern design and easy to clean.

JUMBO Nail outfit

- Maintenance-free, extremely low-noise special turbine
- Infinitely variable volume flow control
- Filter clogging indicator
- Filter for normal and fine dusts
- Odour filter incl. 6 kg of filtering agent
- Low-contamination filter change
- Collecting through self-supporting extraction arm
- Suction nozzle/flat piece
- Optional installation as mobile unit or upright/lying installation of the working table
- Adjustable direction of the exhaust opening

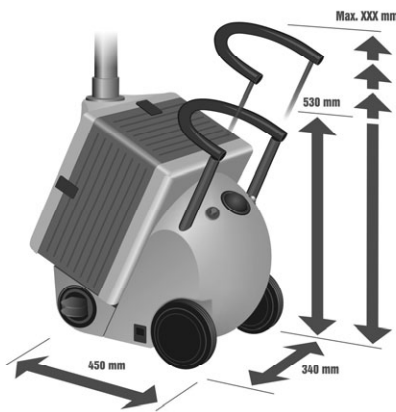

Technical Specifications	JUMBO Nail
Max. volume flow	170 m ³ /h
Max. vacuum	2,800 Pa
Efficiency (operating point)	80 m ³ /h at 1,400 Pa
Power supply	230 V/50 Hz
Power consumption	150 W
Dimensions	450 x 340 x 530 mm
Weight	18 kg
Sound level	for 50 % 45 dB(A) for 100 % 49 dB(A)
Material	impact-resistant ABS, resistant to chemicals and corrosion

Advantages:

- Small, mobile extraction and filtering units
- Very good ergonomics and handling
- High and variable suction capacity at a low noise level
- High efficiency by long filter lifetime
- Digital control with optional remote control possible
- Optionally alternative extraction accessories